

FANTIC

CABALLERO

**WORKSHOP MANUAL
FANTIC CABALLERO 125**

Rev. 00 / 2018

Introduction

This manual was prepared by **Fantic Motor** for use by **Fantic Motor** dealers and their specialized personnel. It is assumed that those who use this documentation for repair and maintenance of **Fantic Motor** vehicles have a basic knowledge of the principles and mechanical procedures regarding vehicle repair techniques. In the absence of these notions, repair or maintenance may be inadequate or dangerous.

Fantic Motor is constantly committed in improving its production. Any significant modifications and changes introduced with regard to vehicle characteristics and repair procedures will be brought to the attention of all **Fantic Motor** dealers and will be published in future editions of the manual.

- Fantic Motor reserves the right to modify and make changes, at any time and without notice, to the models described, specifications and design data, guaranteeing the essential characteristics described and illustrated in this manual.
- ⚠ Operators have the obligation to read the manual and to scrupulously follow the instructions given. The manufacturer is not responsible for damages caused to people and/or things and is not responsible for damages to the product, if the instructions given in this manual are not observed.
- ⚠ This publication, or part of it, cannot be reduced or translated without the Fantic Motor's approval. Reproduction of the contents used in this manual without the Manufacturer's permission is prohibited. Fantic Motor assumes no responsibility for printing errors and omissions. All rights reserved.

Symbols used in the manual

Within this manual there will be technical warnings and annotations preceded by the following symbols according to the reference topic:

- ⚠ Warning regarding the procedure described and the specific safety rules: indicates procedures that must be followed to prevent damage to the vehicle or possible injuries to vehicle repairers.
- Information note on the procedure described and on the characteristics of the vehicle: it provides useful information to make the procedure easier and clearer.
- 🔧 Tightening torque: note showing one or more tightening torques values referred to the procedure described.
- 🔨 Measurement data: note showing the values of one or more measurements to be complied with or verified for the procedure described.
- ✖ Equipment: note that informs the user of the need to use particular tools for the procedure described.
- ♻️ Consumable: note that illustrates the names, types and/or quantities of consumables (such as oil, fuel, sealants, additives, etc.) to be used for the procedure described.

All left or right indications refer to the direction of travel of the motorcycle.

This manual contains images illustrating some disassembling sequences, using the following symbols to identify the characteristics of the type of intervention.

- ➡ E Apply and/or lubricate using engine oil.
- ➡ G Apply and/or lubricate using gear oil.
- ➡ M Apply and/or lubricate using molybdenum disulphide oil.
- ➡ BF Apply and/or lubricate using brake fluid.
- ➡ A Apply a product that is not specified or specified separately.
- ➡ B Apply wheel bearing grease.
- ➡ LS Apply lithium soap based grease.
- ➡ M Apply molybdenum disulphide grease.
- ➡ S Apply and/or lubricate using silicone grease.
- ➡ LT Apply a threadlocker (LOCTITE®).
- New Replace with a new component.

1 Safety rules	9
2 Maintenance rules	11
2.1 Maintenance	11
2.2 Preparation for interventions	11
3 Vehicle identification	12
4 Spare parts	13
4.1 Gaskets, oil seals and o-rings	13
4.2 Washers, plates and split pins	13
4.3 Bearings and oil seals	13
4.4 Retaining rings	13
5 Tightening Torques	14
5.1 Frame tightening torques	14
5.2 Engine tightening torques	14
5.2.1 Engine parts tightening sequences	16
6 Technical Data	18
6.1 Frame technical data	18
6.2 Engine technical data	19
7 Products	23
8 Scheduled maintenance	24
9 Ordinary maintenance procedures	26
9.1 Engine oil level check	26
9.2 Coolant level check	26
9.3 Pads wear check	27
9.4 Check the front brake master cylinder oil level	27
9.5 Check the rear brake master cylinder oil level	27
9.6 Spark plug check	28
9.7 Front brake adjustment	28
9.8 Rear brake adjustment	28
9.9 Clutch lever clearance adjustment	29
9.10 Throttle cable adjustment	29
10 Electrical system and devices	30
10.1 Electrical system diagram	30
10.1.1 Cables colour coding	30
10.1.2 Key to wiring diagram colours	31
10.1.3 Key to abbreviations of the wiring diagram	31
10.1.4 Key to the wiring diagram components	32
10.1.5 Wiring diagram	33
10.2 Cable path	34
10.3 Devices and connectors	41
10.3.1 Key switch	42
10.3.2 Right light stalk	42
10.3.3 Horn	43
10.3.4 Radiator fan	43
10.3.5 Ignition coil	44

10.3.6 Spark plug	45
10.3.7 Water temperature sensor	46
10.3.8 Fuel heater	46
10.3.9 Neutral gear switch	47
10.3.10 Air temperature sensor	48
10.3.11 Pick-Up	49
10.3.12 Side kickstand switch	50
10.3.13 OBD diagnosis connector	51
10.3.14 Ignition module	52
10.3.15 Rear ABS sensor	53
10.3.16 Right rear turn signal	54
10.3.17 Tail light	55
10.3.18 License plate light	56
10.3.19 Left rear turn signal	57
10.3.20 Rear brake light switch	58
10.3.21 Engine ground point	58
10.3.22 Battery negative terminal	59
10.3.23 Battery positive terminal	60
10.3.24 Starter remote control switch	61
10.3.25 Starter motor	62
10.3.26 Generator	63
10.3.27 Voltage regulator	64
10.3.28 Fuel level sensor	65
10.3.29 ABS module	66
10.3.30 ABS mode selection connector	67
10.3.31 Relay and diodes box	68
10.3.32 Left light stalk	69
10.3.33 Left light stalk - secondary connector	69
10.3.34 Fuse box	70
10.3.35 Front headlight	71
10.3.36 Left front turn signal	72
10.3.37 Right front turn signal	73
10.3.38 Dashboard	74
10.3.39 Dashboard - secondary connector	74
10.3.40 Fuel reserve indicator light	75
10.3.41 Front ABS sensor	75
10.4 Fuses and relays	76
10.5 Battery	77
10.5.1 Battery replacement	77
10.5.2 Notes on the battery	77
10.6 Ignition module	78
10.6.1 Ignition module removal	78
10.7 Dashboard	78
10.7.1 Dashboard removal	78
10.7.2 Dashboard settings	80
10.8 Ignition	89
10.8.1 Ignition coil removal	89
10.8.2 Spark plug removal	89

10.8.3 Voltage regulator removal	90
10.9 Light stalk	91
10.9.1 Left light stalk	91
10.9.2 Right light stalk	91
11 Diagnostics	92
11.1 Instruments diagnosis and connection socket	92
11.2 Error codes	93
11.2.1 Ignition module Error codes table	93
11.2.2 ABS module error code table	115
12 Frame	117
12.1 Seat removal	117
12.2 License plate holder removal	117
12.2.1 License plate holder removal (Scrambler version)	117
12.2.2 License plate holder removal (Flat Track version)	118
12.3 Rear tail removal	119
12.3.1 Rear tail removal (Scrambler version)	119
12.3.2 Rear tail removal (Flat Track version)	120
12.4 Passenger handles removal	121
12.5 Side panel removal	121
12.5.1 Left side panel removal	121
12.5.2 Right side panel removal	122
12.6 Air filter removal	122
12.6.1 Oil filter cleaning	122
12.7 Underbody and conveyors removal	122
12.7.1 Left conveyor removal	122
12.7.2 Right conveyor removal	122
12.8 Fuel tank removal	123
12.8.1 Cover removal	123
12.8.2 Complete tank removal	123
12.8.3 Fuel cap removal	124
12.8.4 Tank cover removal	124
12.8.5 Fuel tap	124
12.9 Front mudguard and fork protectors removal	125
12.9.1 Front mudguard removal	125
12.9.2 Fork protectors removal	125
12.10 Rear mudguard removal	126
12.11 Suspensions removal	126
12.11.1 Swingarm removal	126
12.11.2 Swingarm overhaul	127
12.11.3 Swingarm oil change	129
12.11.4 Rear shock absorber removal	129
12.11.5 Linkage removal	130
12.12 Handlebar removal	130
12.12.1 Handlebar removal	130
12.12.2 Plates removal	131
12.12.3 Steering clearance check and adjustment	131
12.13 Swingarm removal	133

12.14 Chain removal	134
12.14.1 Chain removal	134
12.14.2 Chain clearance adjustment	134
12.14.3 Rim removal	134
12.14.4 Sprocket removal	135
12.14.5 Chain roller removal	135
12.15 Wheels and brake discs removal	136
12.15.1 Front wheel removal	136
12.15.2 Front brake disc removal	136
12.15.3 Rear wheel removal	136
12.15.4 Rear brake disc removal	136
12.15.5 Wheels bearings check	137
12.16 Footrests removal	138
12.16.1 Rider footrest removal	138
12.16.2 Passenger footrest removal	138
12.16.3 Frame plate for rider left pedal removal	138
12.16.4 Frame plate for rider right pedal removal	138
12.17 Kickstand removal	139
12.17.1 Kickstand sensor removal	139
12.18 Brake system removal	140
12.18.1 Brake pads removal	140
12.18.2 Front brake calliper removal	141
12.18.3 Rear brake calliper removal	141
12.18.4 Front brake lever removal	142
12.18.5 Rear brake lever removal	142
12.18.6 Front brake master cylinder removal	143
12.18.7 Rear brake master cylinder removal	143
12.18.8 Brake system draining	144
12.19 ABS system removal	145
12.19.1 ABS system hydraulic diagram	145
12.19.2 ABS module removal	146
12.19.3 Front ABS tubes removal	147
12.19.4 Rear ABS tubes removal	148
12.19.5 Front ABS sensor removal	149
12.19.6 Rear ABS sensor removal	150
12.19.7 Front ABS phonic wheel removal	150
12.19.8 Rear ABS phonic wheel removal	150
12.20 Exhaust system removal	151
12.20.1 Silencer removal	151
12.20.2 SAS valve removal	151
12.21 Cooling system removal	152
12.21.1 Cooling system diagram	152
12.21.2 Radiator removal	152
12.21.3 Fan removal	153
12.21.4 Expansion tank removal	154
12.21.5 Thermostat	155
12.21.6 Thermostat check	156
12.21.7 Thermostat installation	156

12.22 Front optical unit removal	157
12.22.1 Front headlight removal	157
12.22.2 Front turn signals removal	158
12.22.3 Turn signal bulbs replacement	158
12.23 Rear optical unit removal	159
12.23.1 Rear headlight removal (Scrambler version)	159
12.23.2 Rear headlight removal (Flat Track version)	160
12.23.3 Rear turn signals removal	161
12.23.4 Rear turn signal bulbs replacement	161
12.24 Starter lever removal	162
12.25 Clutch lever removal	162
12.26 Rear-view mirrors removal	162
12.27 Throttle control removal	163
12.27.1 Throttle control knob removal	163
12.27.2 Throttle cables removal	163
13 Engine	164
13.1 Complete engine removal	164
13.2 Valve clearance adjustment	167
13.3 Compression pressure measurement	169
13.4 Engine oil change	170
13.5 Cylinder head	171
13.5.1 Cylinder head removal	172
13.5.2 Cylinder head check	173
13.5.3 Camshaft sprocket and timing chain guide check	173
13.5.4 Timing chain tensioner check	174
13.5.5 Decompression system check	174
13.5.6 Cylinder head installation	175
13.6 Camshaft	177
13.6.1 Camshaft check	178
13.6.2 Rocker arms and rocker arm shafts check	178
13.6.3 Installation of camshaft and rocker arms	179
13.7 Valves and valve springs	180
13.7.1 Valve removal	181
13.7.2 Valves and valve guides check	181
13.7.3 Valve seats check	183
13.7.4 Valve springs check	185
13.7.5 Valves installation	185
13.8 Cylinder and piston	188
13.8.1 Piston removal	189
13.8.2 Cylinder and piston check	189
13.8.3 Segments check	190
13.8.4 Piston pin check	191
13.8.5 Piston and cylinder installation	192
13.9 Unidirectional starter generator	193
13.9.1 Generator removal	194
13.9.2 Unidirectional starter removal	194
13.9.3 Unidirectional starter gear check	194

13.9.4 Unidirectional starter installation	195
13.9.5 Generator installation	195
13.10 Electric starter	197
13.10.1 Starter motor check	199
13.10.2 Starter motor assembling	200
13.11 Clutch	201
13.11.1 Clutch removal	204
13.12 Driving friction plates check	204
13.13 Driven friction plates check	204
13.13.1 Clutch springs check	205
13.13.2 Clutch housing check	205
13.13.3 Clutch hub check	205
13.13.4 Pressure plate check	205
13.13.5 Clutch control lever control and short clutch control rod check	206
13.13.6 Primary drive driving gear check	206
13.13.7 Primary drive driven gear check	206
13.13.8 Clutch installation	206
13.14 Oil pump	209
13.14.1 Lubrication system diagrams and tables	211
13.14.2 Oil pump check	214
13.14.3 Oil pump assembling	214
13.14.4 Oil pump installation	214
13.15 Gear shift shaft	215
13.15.1 Gear shift shaft check	216
13.15.2 Cut off lever check	216
13.15.3 Gear shift shaft installation	216
13.16 Balancer gear	217
13.16.1 Primary drive driving gear and balancer gears removal	218
13.16.2 Primary drive driving gear and balancer gears check	218
13.16.3 Primary drive driving gear and balancer gears installation	218
13.17 Crankcase	220
13.17.1 Crankcase separation	222
13.17.2 Crankcase check	222
13.17.3 Timing chain and timing chain guide check	223
13.17.4 Oil filter check	223
13.17.5 Bearings and oil seal check	223
13.17.6 Bearing fastener installation	223
13.17.7 Crankcase assembling	223
13.18 Crankshaft	225
13.18.1 Crankshaft removal	226
13.18.2 Crankshaft check	226
13.18.3 Crankshaft installation	226
13.19 Drive	228
13.19.1 Gear shift forks check	231
13.19.2 Gear selector drum unit check	231
13.19.3 Drive check	232
13.19.4 Clutch control rods check	232
13.19.5 Primary shaft and secondary shaft installation	233

13.19.6 Installation of gear shift forks and gear selector drum unit	233
13.20 Water pump	234
13.20.1 Water pump disassembling	236
13.20.2 Water pump check	236
13.20.3 Water pump assembling	236
13.20.4 Water pump installation	238
13.21 Carburettor removal	238
13.21.1 Carburettor removal	238
13.21.2 Idle adjustment	239